OWNER'S MANUAL

Armex Whizzkids Buster Compound Bow

This youth bow is engineered for accuracy and long life in addition to its contemporary design, manufactured from the finest materials and innovative technology. Used correctly you will experience lots of enjoyment from this new bow, it takes little setting up to get started shooting, therefore please read this manual particularly the maintenance and care section before attempting to use this bow.
Have fun and we wish you much success in becoming a master archer!

Safety rules and warnings

1. This bow is NOT a toy. Adult supervision is recommended.

2. NEVER "Dry Fire" your bow (without an arrow). Dry-firing a bow severely weakens the structure of your bow and may cause immediate damage resulting in wound to yourself, property or others. Do not pull back and release the string without an arrow attached to the string as this voids the warranty.

3. Shooting underweight arrows has the same effect as dry-firing a bow and may cause serious injury. Never use underweight arrows. Do not point a drawn bow at anything other than a recommended archery target.

4. Inspect your bow, arrows and nocks regularly. Damaged bow, arrows and nocks may cause serious injury. Any dented, split, or splintered arrows should be discarded immediately.

5. Carefully inspect your bow after each use. Be sure all parts are secured and accessories are tight. Inspect your string and cables for wear or damage.

6. Do not draw your bow beyond its maximum draw length as damage to the limbs, cables and strings could occur.

7. Make sure the accessories are properly installed before shooting.

BOW TERMINOLOGY & DIAGRAM

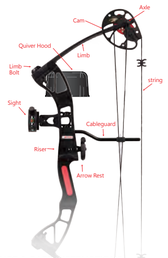

MAINTENANCE & CARE INSTRUCTIONS

It is important to inspect your bow regularly.

With proper care and regular maintenance, your bow will be kept in good condition.

Lubrication

If your bow is cable type, no lubrication is necessary.
If your bow is string type, please apply recommended lubrication regularly on the string. Avoid excessive lubrication of any item, as this can attract dirt and void the warranty.

Cleaning

Do not use solvents such as acetone or mineral spirits as they may ruin the finish. Simply use a damp soft cotton cloth to wipe off the dirt and moisture.

Storage and Transportation

Avoid exposing your bow to extreme heat or store your bow close to a wet or damp place. Excessive heat may damage your bow.
Do not leave your bow unprotected in your vehicle on a hot sunny day or store in a hot attic or other hot enclosed area. Clean your bow thoroughly after each use.
Lightly use recommended lubricant wax, spread all steel parts (axles, mounting screws) to prevent rust.

SETTING UP YOUR BOW - Sight Set Installation

Install the sight pin and locking nuts into
the sight mounting bracket as shown below and
then install the sight mounting bracket to the bow.

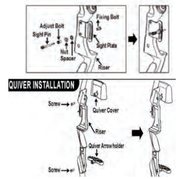

Quiver Set Installation

Install two-piece quiver to the bow riser
using provided wrench kits and screws as shown.

Sight Adjustment

When adjusting the sight pin position, always remember to "follow the group" meaning if the shot group is to the left of the target, move the sight pin to the left. If shot group is low, move the sight pin down.

BOW ADJUSTMENTS

Slide Module and Draw Weight/Draw Length Adjustment

If your bow comes with the string version and it is equipped with the Slide Module, you then can adjust the draw weight. The rotatable Slide Module assembled on cams provides the adjustable draw length from 17" -26" in 1" intervals. To adjust the draw length, using a suitable Allen wrench to remove the module screws that attach the modules to the cams. Then, rotate the modules to the desired draw length holes and tighten the screws. Make sure that the module is flush against the face of the cam while tightening the screws. Next, perform the same operation on the opposite cam. Please make sure both sides of cams are set to the same draw length position.

Draw Length	Module	Draw Length	Module
Module	A	24"	D
A	B	24"	25
B	C	25"	D
C	D	25"	25
D	E	26"	E
E	F	26 3/4"	25
F	A	26 3/4"	D
A	A	27 1/4"	E
Module	A	27 1/4"	E

Shooting Preparation

Put the armguard on the arm with which you hold the bow. The armguard should cover the inside of your lower arm area to protect it from being struck by the string when it is released.

Nocking the arrow

Before each shot, check all arrow components include nock, insert and tip. Make sure there are no cracks or dents on the shaft or a loose nock. With a bow in the relaxed position, snap arrow nock onto the string in between the finger rollers and keep your shaft aligned with the center of arrow rest and string.



Place your Index finger on the upper finger roller above the nock point and middle and ring fingers at the bottom rollers under the arrow.

Ready to Shoot

Draw the bow string back to your jaw, anchor your first finger at the corner of your month. Keep your arm slightly bent, and keep your bow straight up and down, aim at your target and then release the bow string. Never release your string without an arrow nocked.

WARRANTY POLICY

This product is backed with a limited warranty service.

Original Owner

This warranty service applies to the original owner only and it is not transferable. Presenting the purchase receipt to your supplier may be required.

Exclusions

Strings, cables, bearings, paint and /or hydrographic film transferred finishes. Bow accessories are also excluded.

Damages caused by the following reasons will not be covered under this warranty: abuse, mishandling, dry firing, alteration or modification to original product, using a bow press improperly without consulting with a pro-shop or your dealer will also not be covered under this warranty. Shooting arrows less than five grains per pound of draw weight will void the warranty. Damages caused by altered or damaged arrows and other none recommended after-market parts or accessories are also excluded.

For full warranty details, please contact your local dealer or supplier for further information.